


Helen

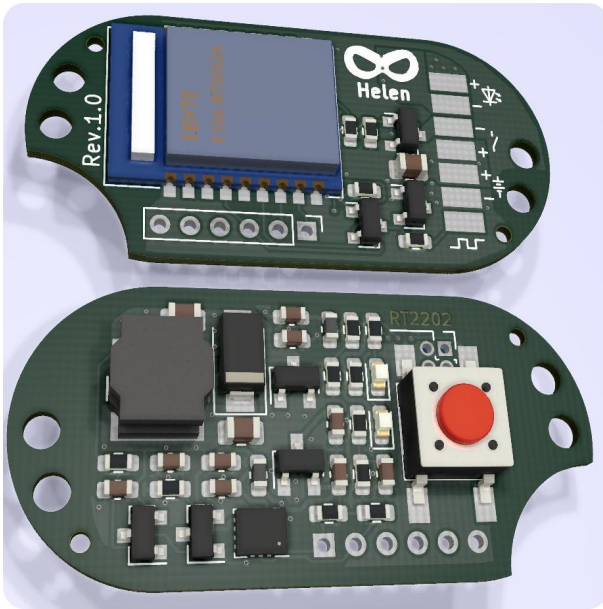

User Manual Appendix

Index

Appendix A Firmware Update.....3

Appendix A Firmware Update

Currently the `Light Control App` does not support firmware updates yet, but the firmware can be updated with `nrf connect` from Nordic Semiconductors.

First download the new firmware archive (`KD2_10.zip`) from the Github repository in the folder `Firmware/Helen/bin_debug`.

Now open the App and start scanning. Connect to `Helen` and start the update by tapping on the small DFU icon in the top. Then select the previously downloaded firmware archive.

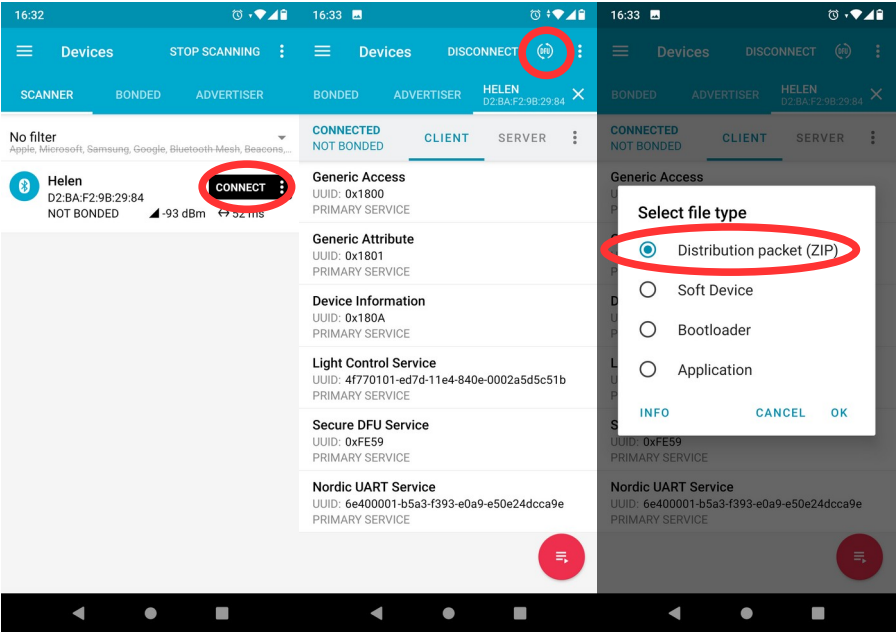


Image 1: scan and connect to Helen

Image 2: start update

Image 3: select Distribution packet (ZIP)